


**Pictures of 400 items of 1000 items total**

1955 - 1975

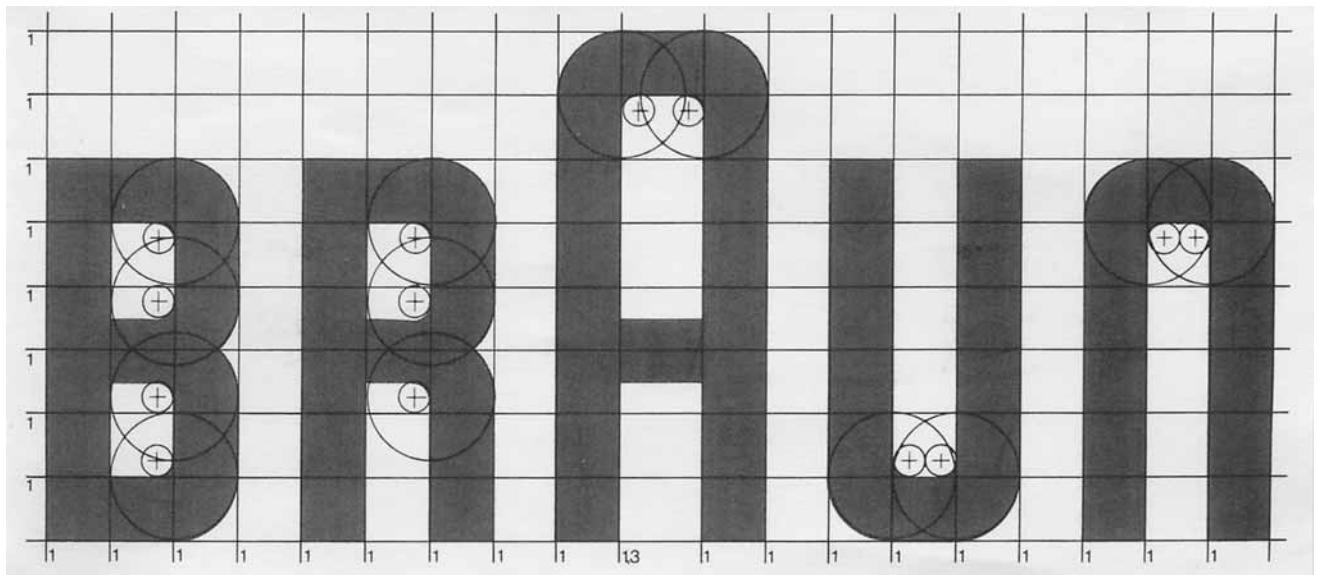

**Design Collection**

## **INDEX**

|                                 | Page |
|---------------------------------|------|
| Phono & Television              | 1    |
| Film & Photo                    | 26   |
| Clocks & Watches                | 32   |
| Calculators & Torches           | 34   |
| Lighters                        | 35   |
| Shaving Gear & Personal Hygiene | 36   |
| Kitchen Appliances              | 43   |
| Products before 1955            | 52   |

about 400 items produced between 1955 and 1975 plus several pieces before and after this period



TS 31 / G11

1957 / 1955



G 12

1955



FS 1

1955



HF S 2

1955




MS 2

1955



PKG 3

1955

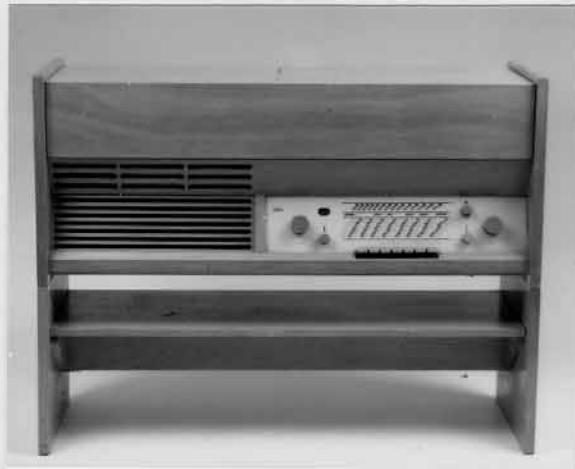

PKG 4

1956



PKG 5/8 (without base)

1960



TS 3-81 / TS 1

1957/1956



SK 4/2

1956



SK 5

1958



SK 6

1960



SK 61

1961



SK 55

1963



HM 2

1956



MM 3

1956



MM 4/7

1958




MM 4A4

1958




Exporter 2

1956

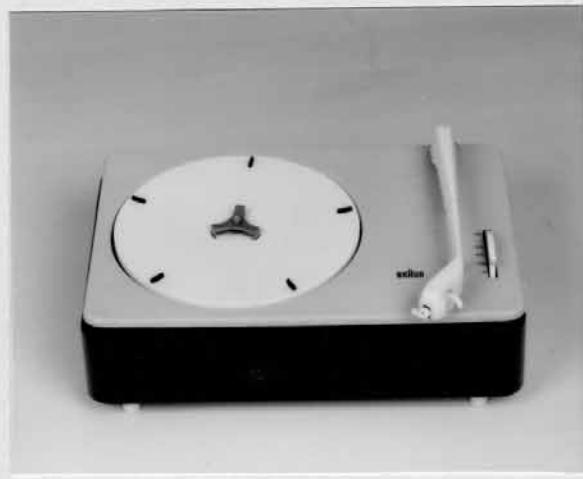

PC 3 SV

1956

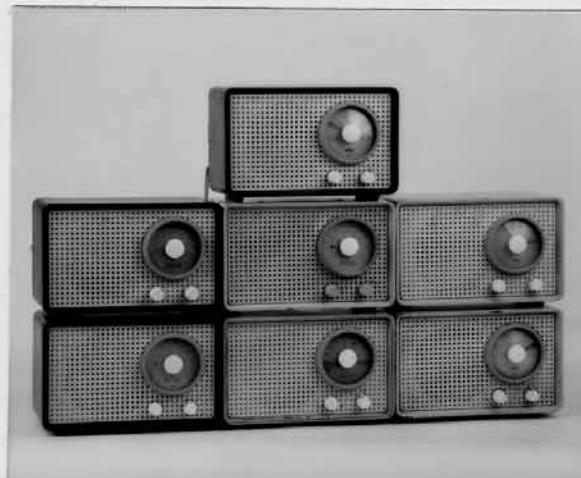

SK 25 light grey, SK3 graphite  
SK 2/2 black & grey  
SK 2 black, grey & beige

1955-1961



Transistor 1, K, T 22, T 24

1957-1960



T 220 black & grey

1961



PC 3 / PCK 4

1957 / 1960



Studio 1

1957



L 3

1957



Atelier 1-81

1957



Atelier 1

1957




Atelier 2

1960




Atelier 11 C

1961

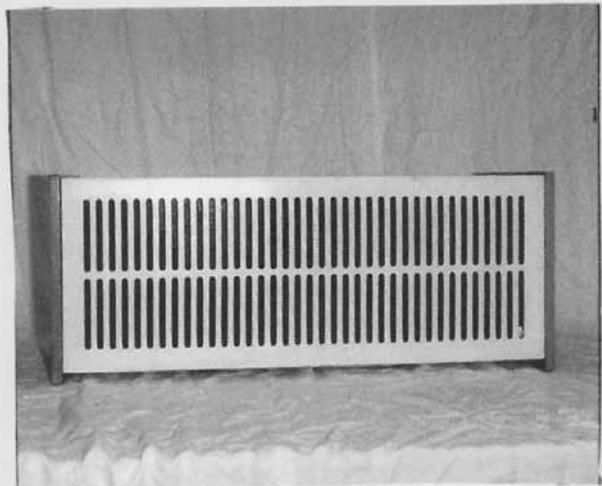

L 1

1957

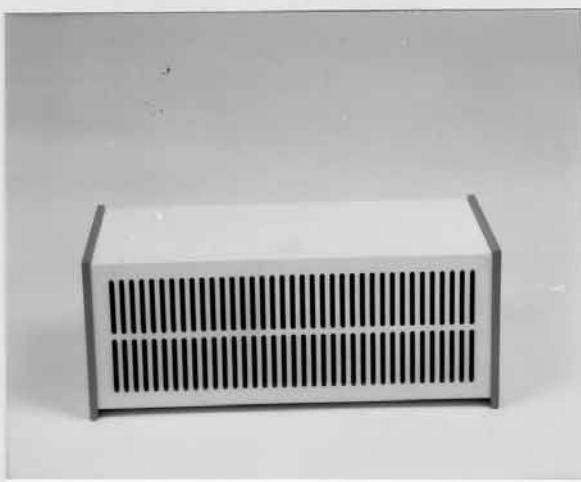

L 11

1960



HM 6

1958



HM 5

1959



R 10

1958



RL 10 / RB 10

1959



FS 3

1958



FS 4

1958




R 23

1961



L 2

1958

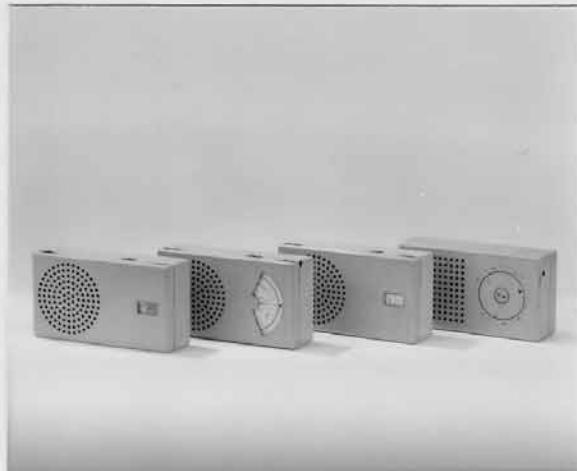

T 4, T 41, T 4, T 31

1959, 1962, 1959, 1958




TP 1

1959



Studio 2 CS 11

1959

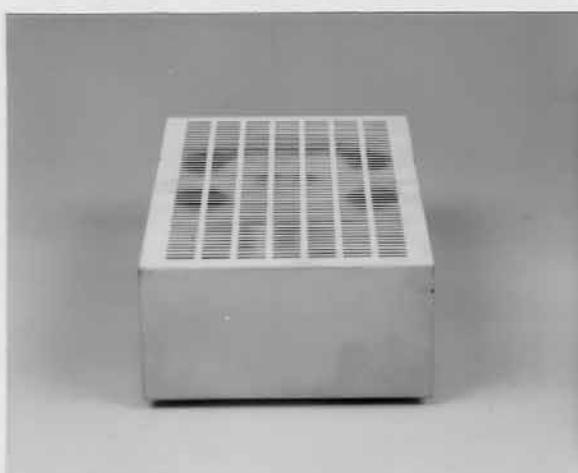


Studio 2 CV 11

1959




Studio 2 CE 12

1959

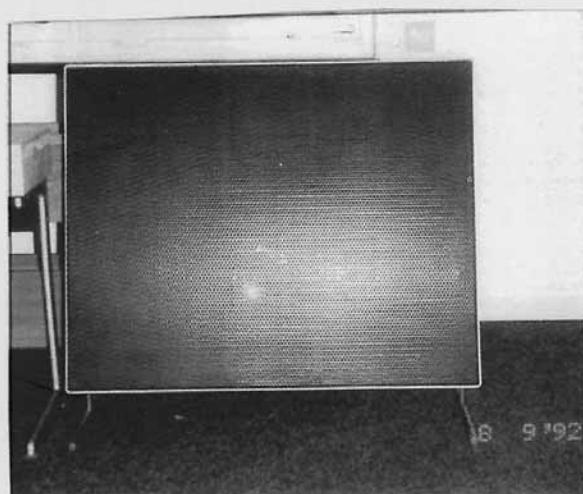


LE 1

1959

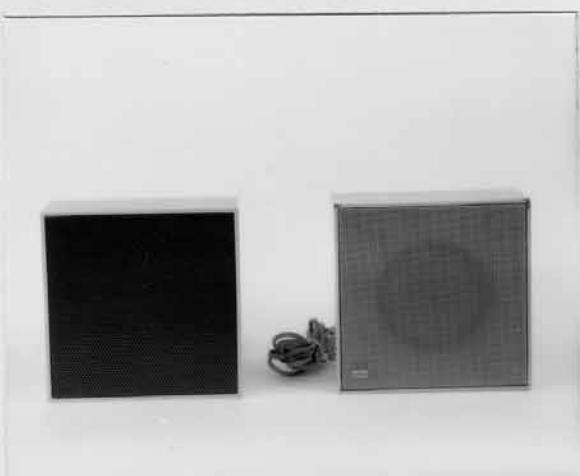

L 02 black & grey

1959

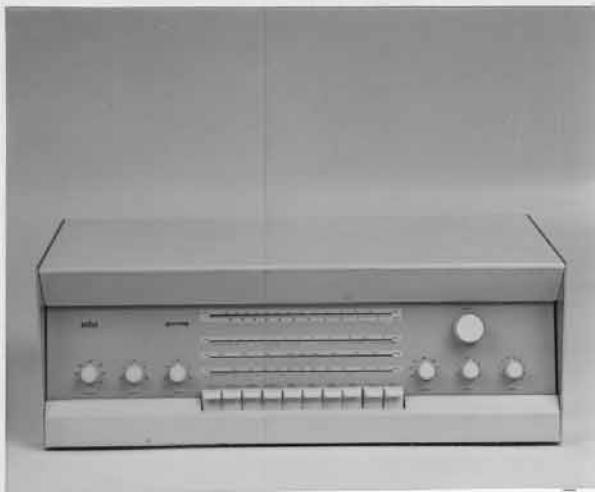

RCS 9

1961



Atelier 3

1962



FS 5

1961



FS 51

1962



PCS 4

1961



PCS 45

1962




RT 20

1961




RT 20 dark grey

1961

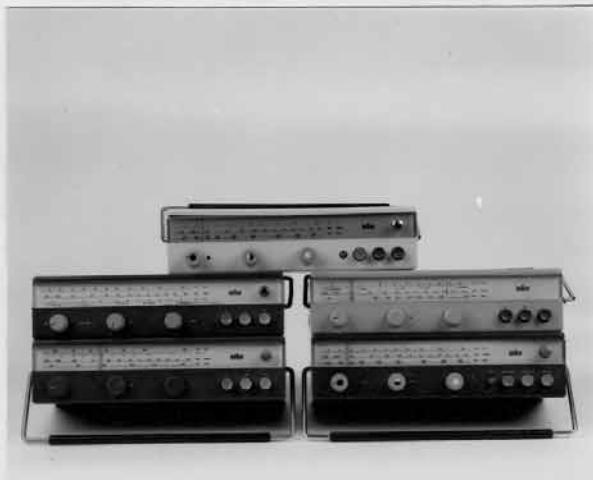

T 52, T 521, T 540, T 580

1961 - 1963

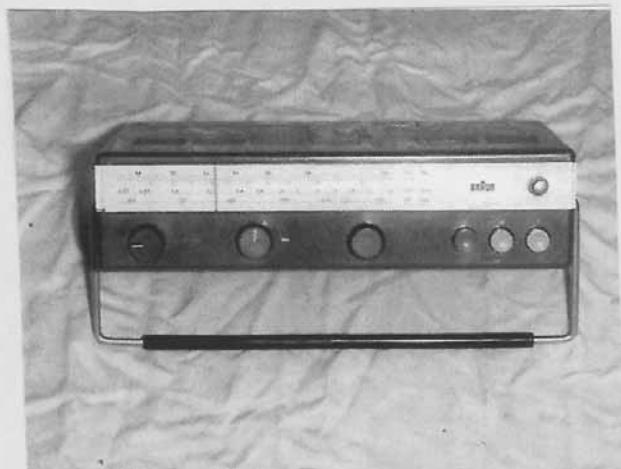

T 52

1961



TC 20 S

1963



TC 20

1963



Audio 1 M

1957




Audio 2

1964



Audio 2

1964

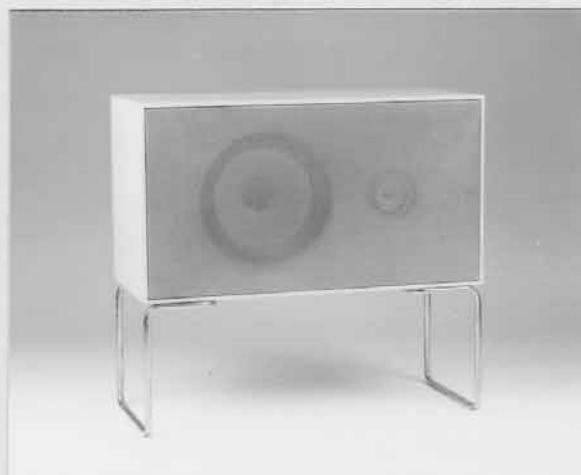

L 60/4

1964



Audio 300

1969



Audio 310

1971



CSV 13

1961



CET 15

1963



CSV 12

1966



CE 16

1964



CSV 60/1

1967



PCS 5

1962



PCS 5

1962




PCS 51

1962



PCS 52

1952

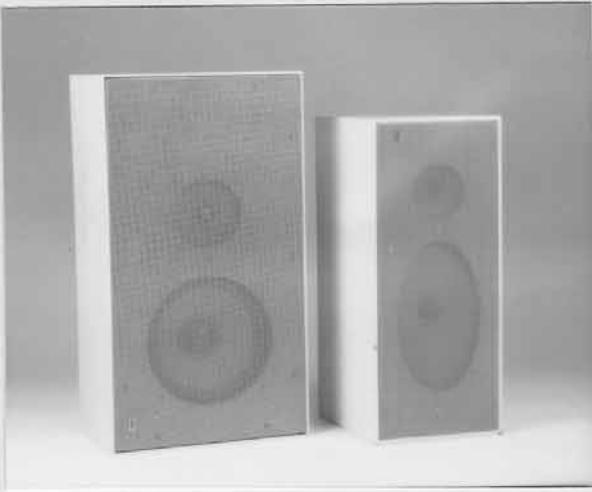


L 45 / L 20

1962

L 700/4 L 20

1965 / 1962

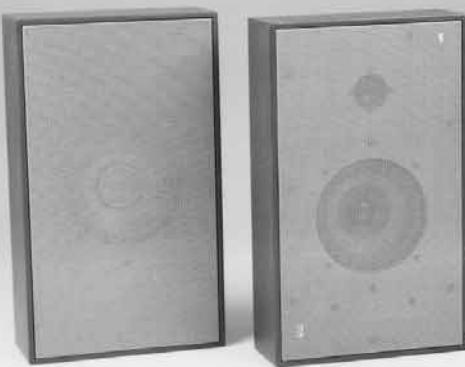


L 25 L 450

1963 / 1965



T 1000 / T1000 CD

1963 / 1968

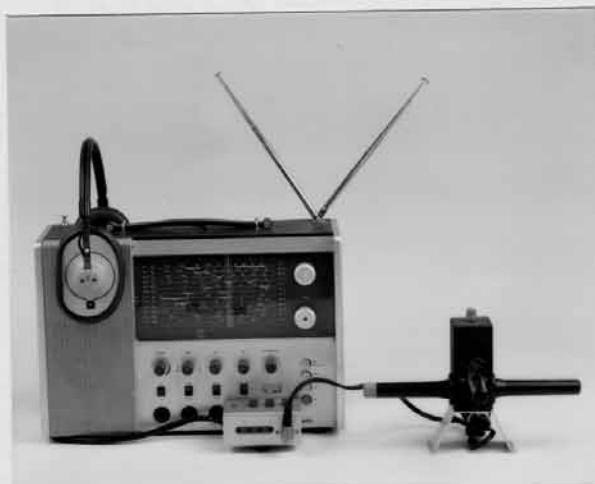


KH 100, PV 1000, PK 1000

1968



FS 6

1963

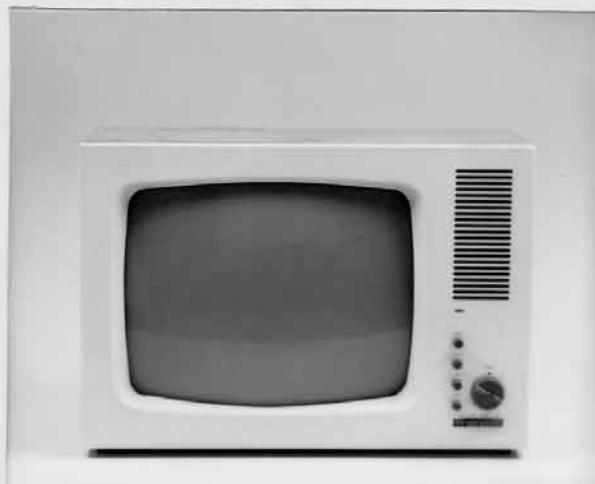

FS 6

1963




FS 60

1964



TS 45/1 white

1964

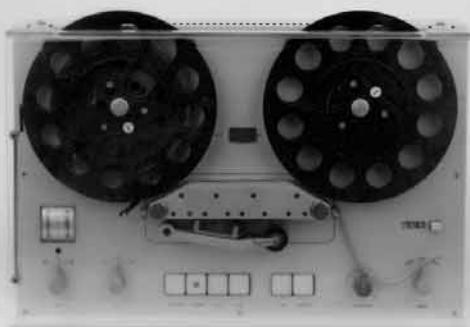


TG 60 white

1965




PS 402

1967

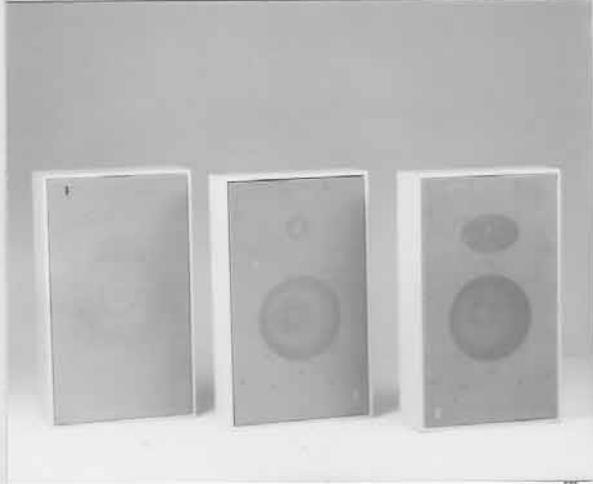


L 25, L 450, L 470

1963, 1965, 1969

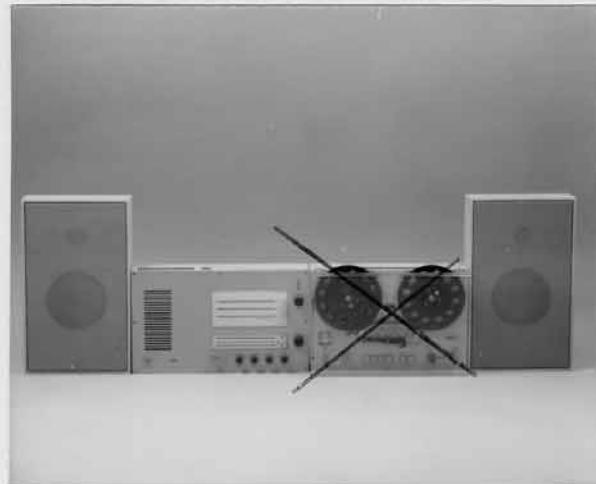

TS 45 graphite

1964

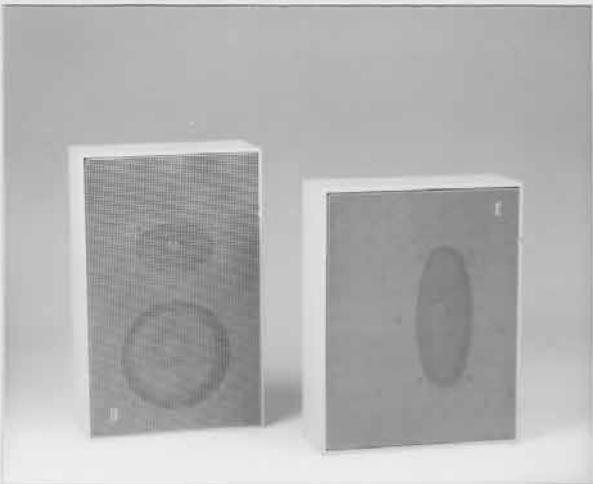

L 310, L 250

1970, 1967




FS 80

1964



FS 600

1966

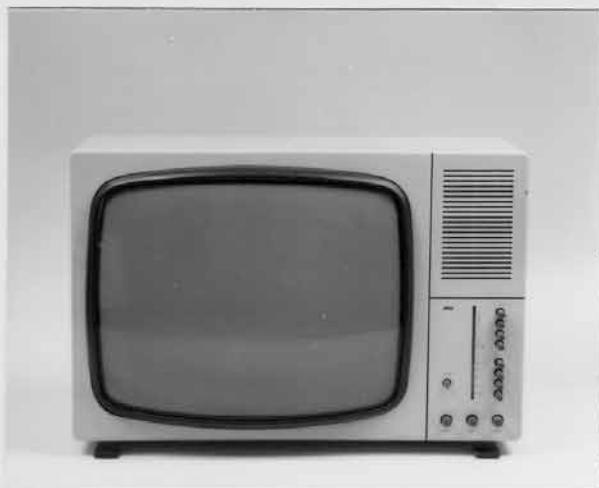

FS 600

1966



FS 1000

1967



FS 1010

1969



CSV 1000

1965



CE 1000/2

1965



PS 1000

1965




TG 550

1968



Tone arm balance to PS 1000

1965

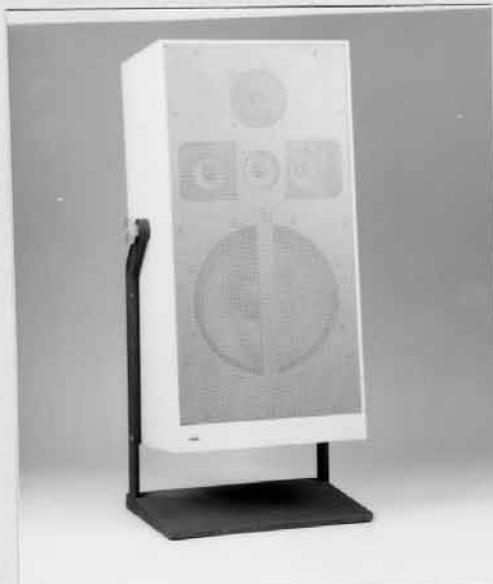

L 910

1968



CSV 500

1967



CE 500

1966



TG 502/1

1967



L 550, L 550/1

1970, 1971



CE 251

1969



CSV 300

1970



Regie 500

1968




PS 430

1971



PS 600

1969

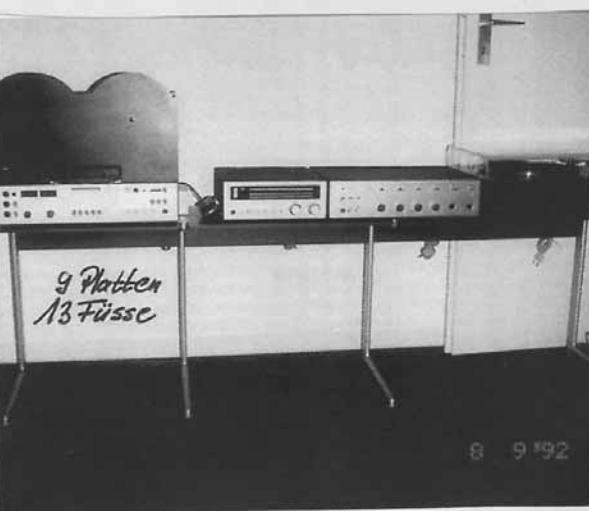

System basement

1967



KH 100, KH 1000, KH 500

1968, 1967, 1975



Regie 510

1972




PS 500

1968



TG 1000

1970

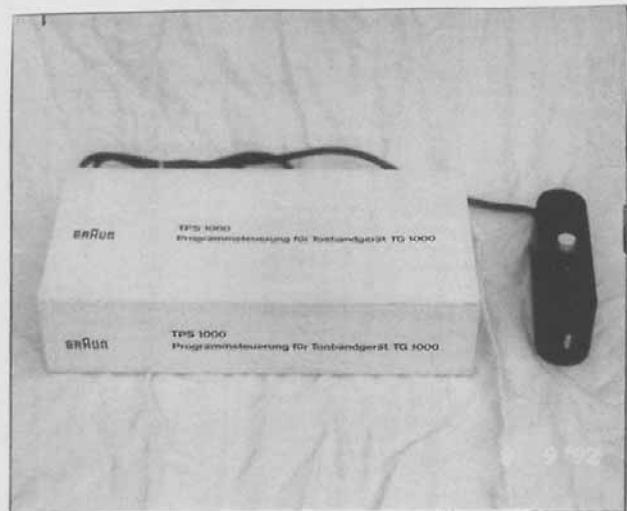

Accessories to TG 1000

1970



Test Long Plays



CT 1020

1977



Regie 520

1974



PS 550

1976




TGC 450

1975



L 715

1975

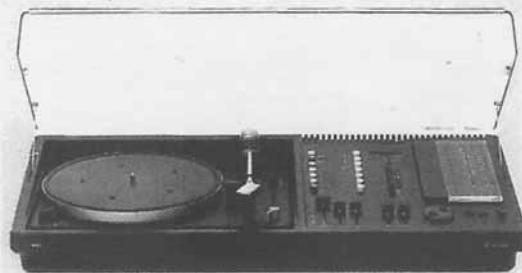

Audio 308

1973



Regie 308

1973



L 308

1973




Audio 400 S

1973



Cockpit 260

1970

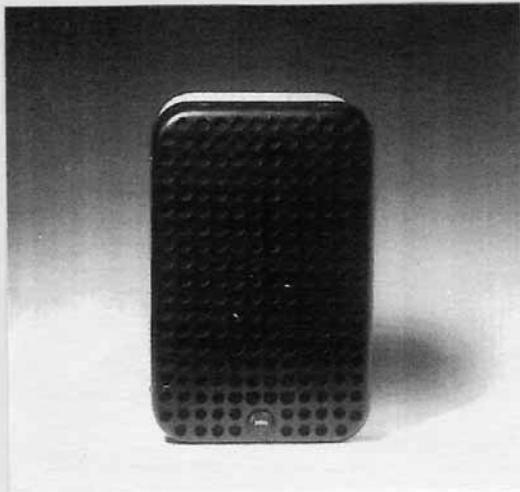

1972



Lectron (4 different sets)

1967



Lectron

1969



GT 501

1977



GT 500

1977



GS 2

1978



HFK

1956



PS 450

1973



PS 550 S light grey

1977




A 301 light grey

1978



TS 501 light grey

1978

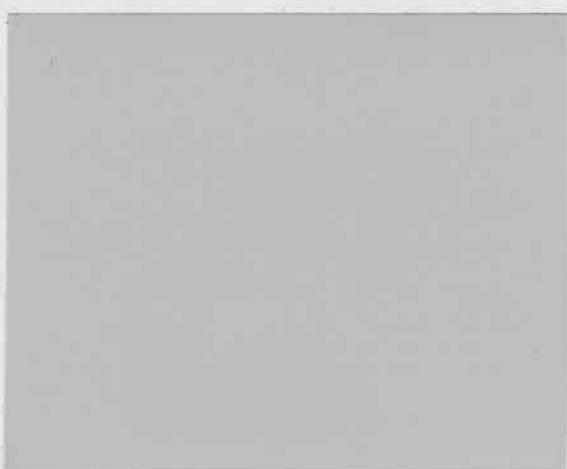

TV 3 light grey

1986




Standard

1958



Special NC

1958

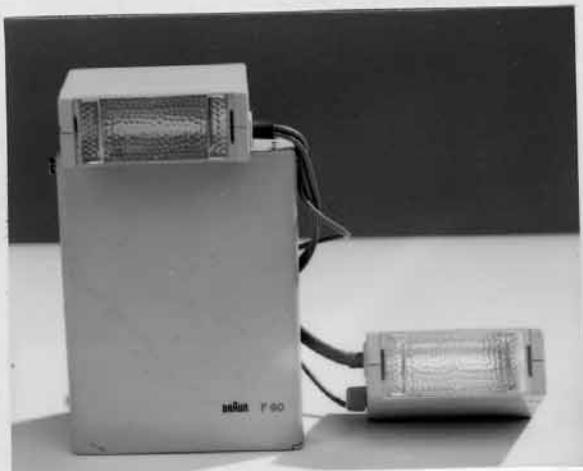


F 60

1959



F 30 B

1959

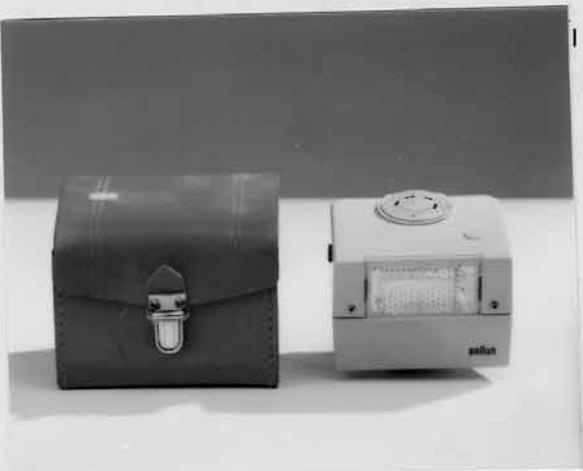

F 21

1962



F 26

1963



EF 300

1964



F 40

1964



F 800

1965



F 80

1961



F 111

1970



F 245 LSR

1971



F 022

1972



320 BVC, 380 BVC

1980, 1976



BP 320

1978



Filters



F 900

1974



Nizo FA 3

1963



Nizo EA 1

1964



148 macro

1973



FP 30

1971



FP 8

1974




FK 1

1968



FK 4

1977

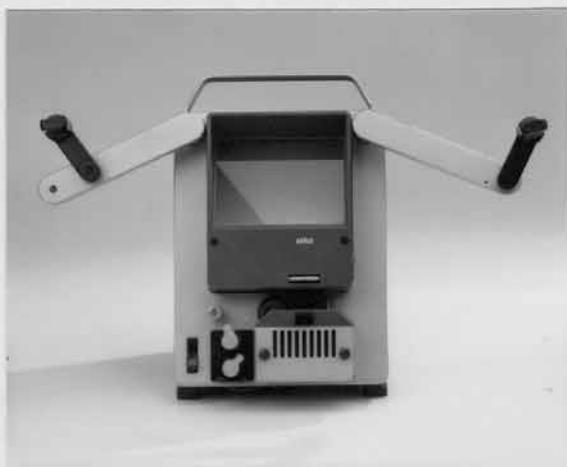

SB 1

1968



PA 1

1956



PA 2

1957



D 20

1962



D 10

1962



D 6

1963



D 46, D 40

1970, 1961



D 21 SV

1964



D 300

1970



Nizo Elektronik 1000

1968



FF 1

1964



ABW 21 Desk

1979



ABW 21 Set

1979



ABW 41

1982



Phase 1

1971



Phase 1

1971




Phase 2

1972



Phase 3 black, Signal, Silentime

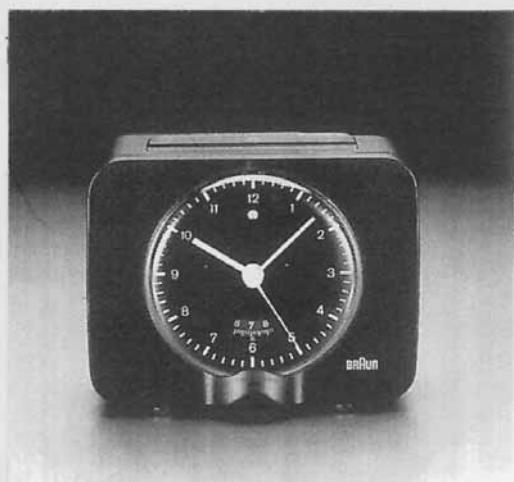


Phase 3 white

1972



Functional, Elektronik DN 40

1975, 1976

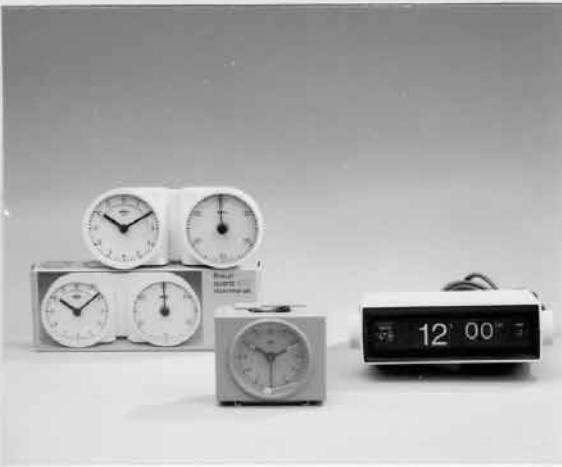

KTC Set, AB 31T, Digital

1985, 1975



ABR 21

1978



DW 30, DW 20 silver, AW 10

1978, 1977, 1989




ET 22, ET 55, ST 1

1976, 1981, 1987



Manulux NC, Diskus

1964, 1970

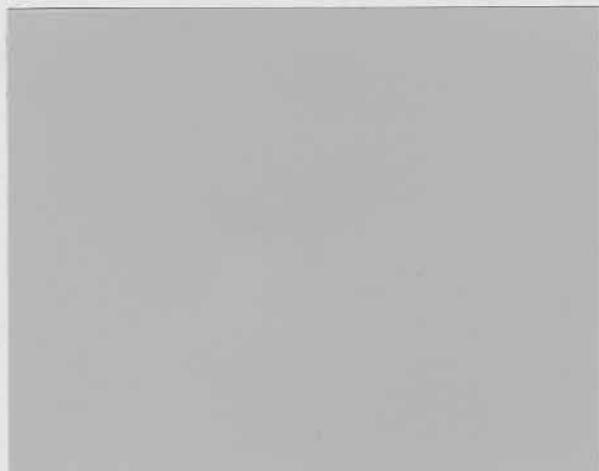


Manulux DT1 olive

1964



TFG 1 (2 different pieces)

1966

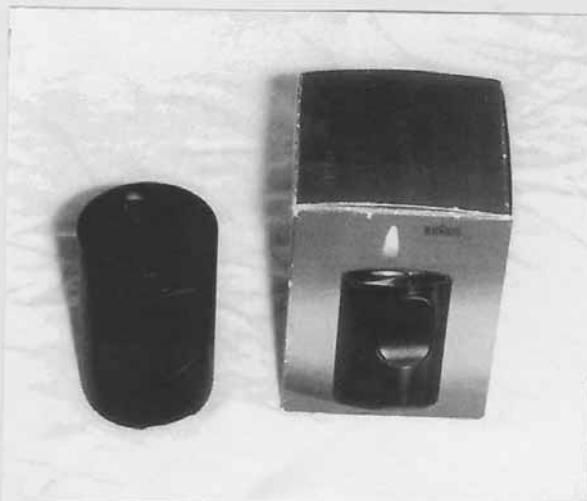


TFG 2 (2 different pieces)

1968



Duo, F 1 Linear

1976, 1971

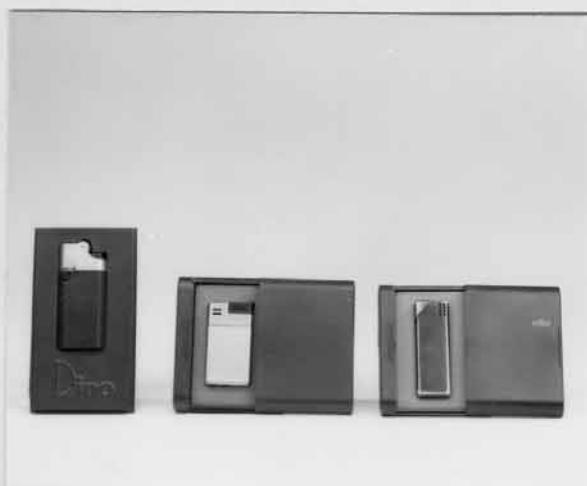

Dino, Mach 2, Electric

1975, 1971, 1972



Domino, T 3

1970




Domino Set

1976



300 Deluxe (5 different pieces)

1955

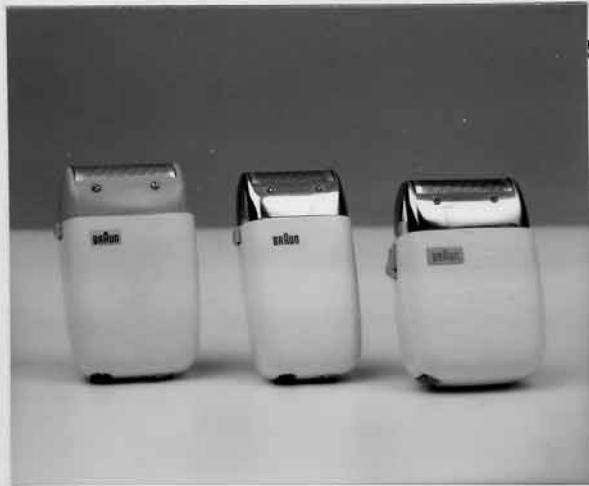

Spezial SM2, S 60

1960, 1958



SM3, Combi 1

1960, 1957



Parat BT SM 43

1966



Commander, Sixtant BN

1966, 1967



Cassett, Pocket, Sixtant

1970 - 1990



Sixtant, Sprint

1962 - 1977



Intercontinental

1972




Stab B1 & B2

1965/66



Stab B 11

1969

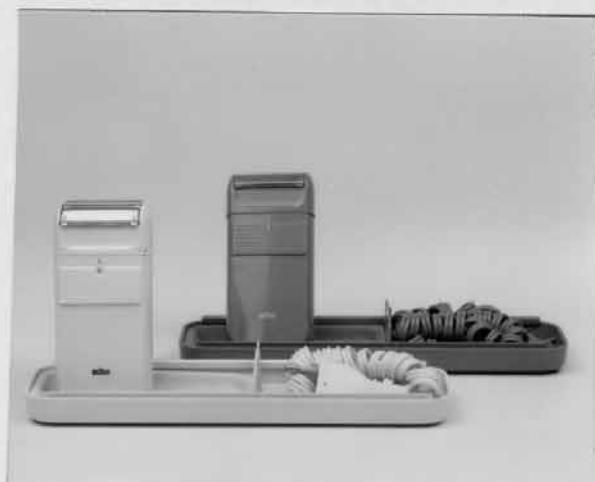

Lady Elegance

1979



Lady Shaver, BM 12

1971/72



Hand mirror

1967, 1973



Cleaning accessories



Micron

1976



Micron L

1976




Micron plus / 2000

1979




Exact universal

1986

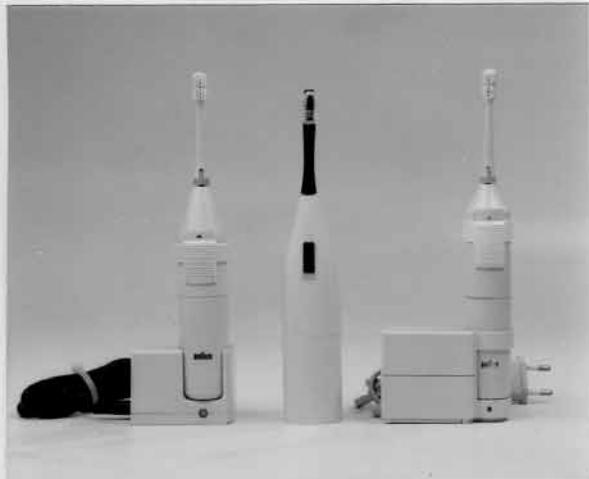

ZB 1, Mayadent, Dental D3

1978, 1963, 1984

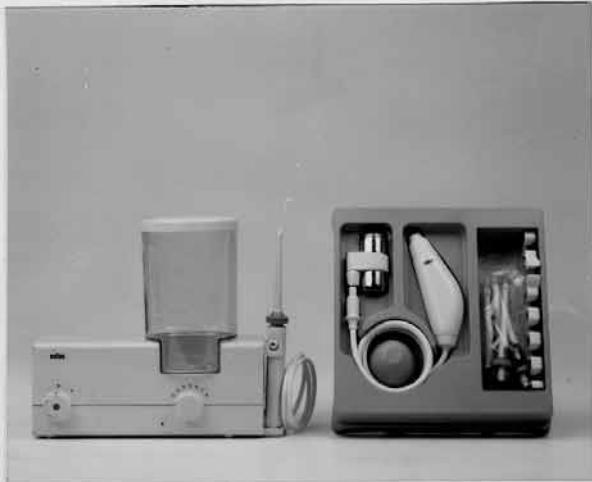

MD 1, MD 2

1979, 1980



MD 1, ZB 1

1979, 1978



Instadent



HUV 1

1964




HB 1

1968




HW 1

1968

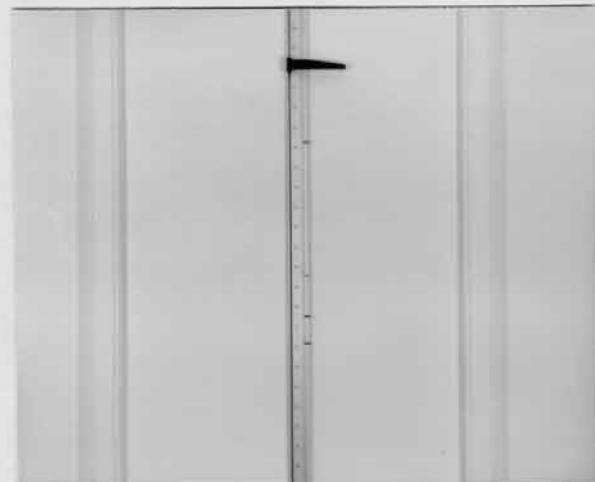

HML 1

1970

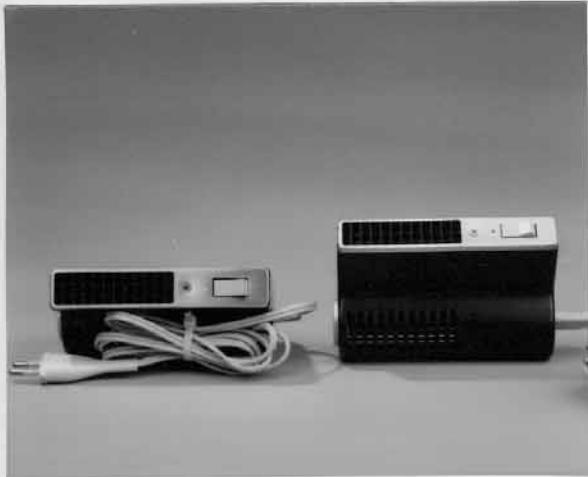


HLD 2, HLD 231

1964



HLD 21

1964

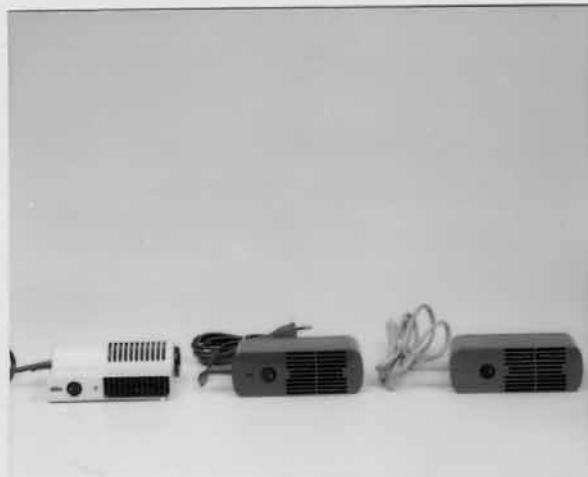

HLD 3, HLD 4 yellow, red, blue

1972, 1970



PGE 1200, HLD 6

1978, 1971



HLD 5

1972



Super Compact, 1200 Silencio

1978, 1982



HLH 10, HLH 2

1975, 1974



RS 65

1977



DLS 20, LS 36, LS 35

1976, 1982, 1979



KM 3

1957



Accessories to KM 3

1957




Accessories to KM 3

1957



KM 2

1965

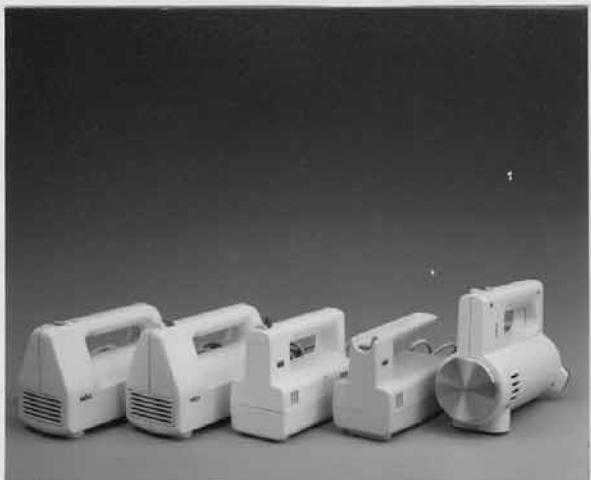

M 140, M 140, M 12, M 11 1968, 1968, 1963, 1960



MX 32, MX 3

1962, 1958



ZK 1 & Accessories

1979



MP 32, MP 31, MP 31

1965, 1957, 1957



MP 50

1970



Citromatic 2, MPZ 1, MPZ 2

1982, 1965, 1972



HG 1

1962



HMT 1

1964



HTG 2, HTG 1

1971, 1970



TT 30

1972



DS 1 (right side)

1972



HE 12

1961




HT 2, HT 6, HT 2, HT 1

1963, 1980, 1963, 1961



US 20

1973

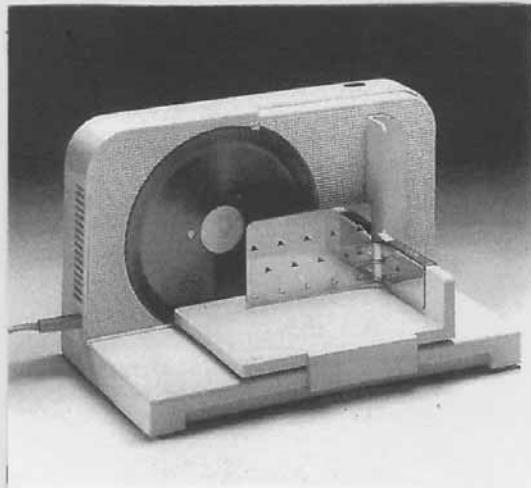

US 10

1973




WT 10

1974



HGS 20

1961

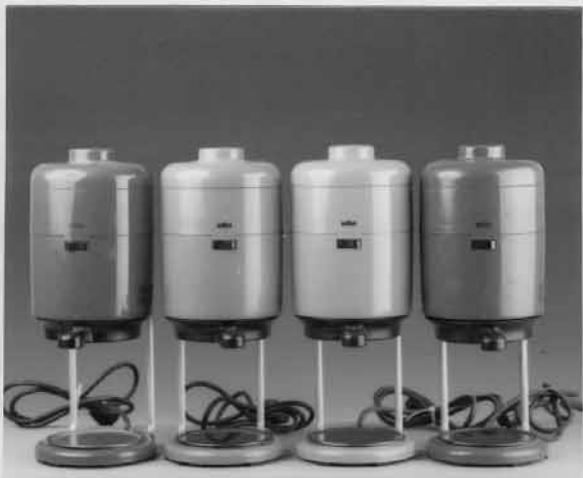

KF 20 red, orange, white, green, dark red 1972



KF 21 white, yellow 1976



KF 30 1977



KF 90, KF 70 1986



KMM 1 1965




KSM 1, KSM 11 1967




KMM 2 yellow, white

1969

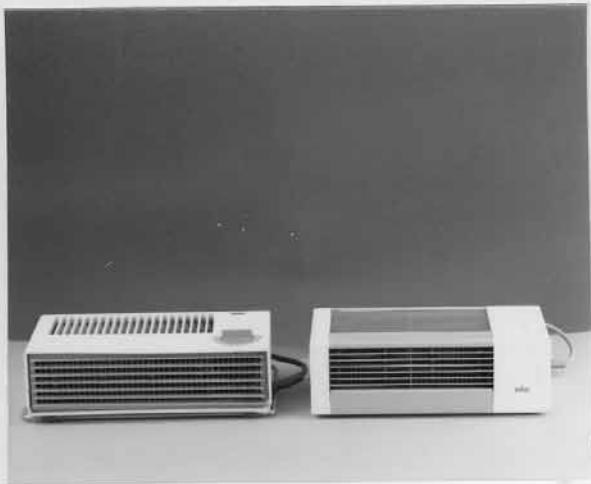


H 3, H 2

1962, 1960

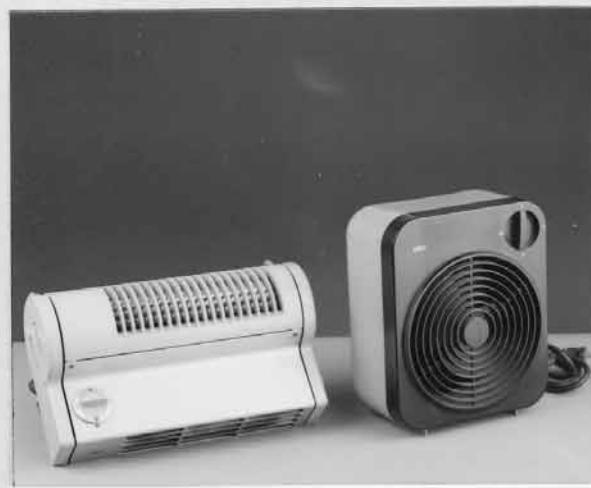


H 7, H 5

1967, 1973

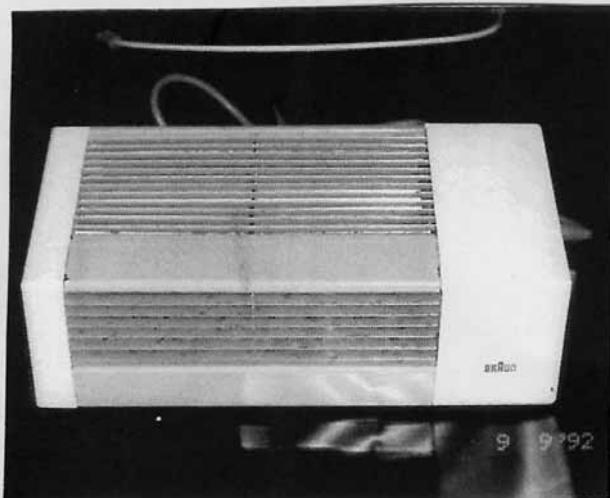

H 1

1959

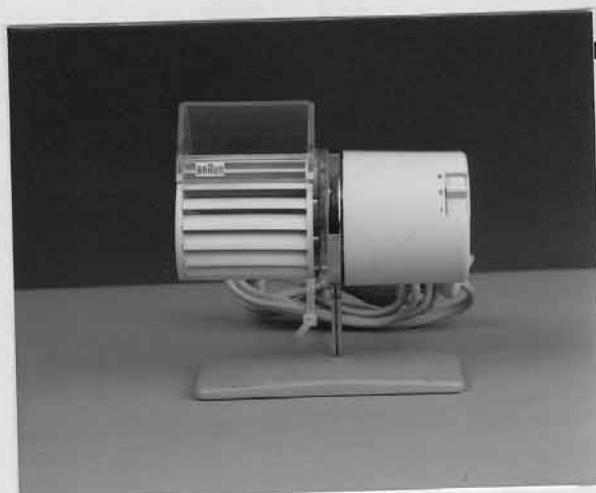

HL 1

1961



HL 70 white, yellow, black

1971



HL 2

1962



ELF 1 white

1973



ELF 1 black


1973



PV 2



YG 2

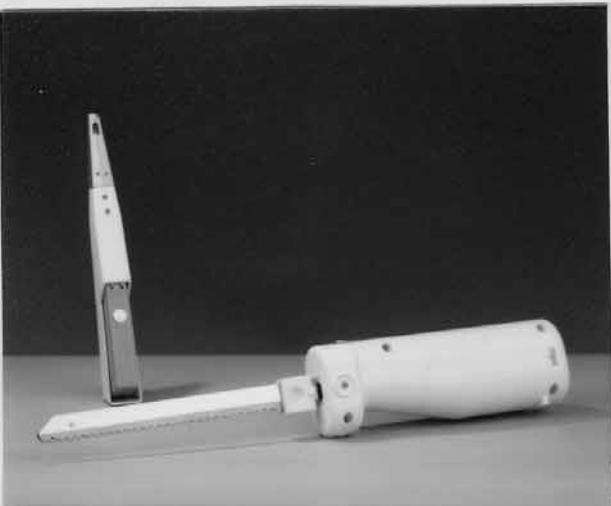

Gas lighter, EK 1



UKW 1, Egg timer

1983



IC 1



WF 1



Multimix 111

**BEFORE 1955**



222 UKW MT



333 UKW MT



99 UKW Phono



Phono Super 950




Phono Super 650



Super 860



Radio 726

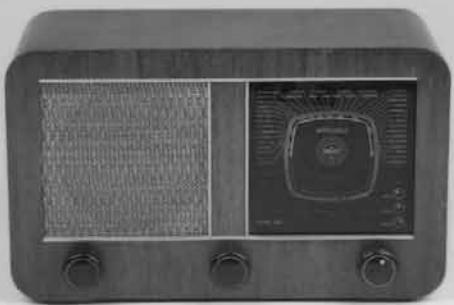

Super 450



Super 4547



Super 560



Super 550



LL 49



444 W



LL 49



VE 301 Dyn



VE 301 Wn



Deutscher Kleinempfänger



BKS 36



BSK 239 D



P 50



Super Piccolino 51



100 B/54



Exporter



Hobby



Hobby Automatic



Hobby



Hobby



S 50 (different versions)




Manulux



Multimix



Multipress, Multimix

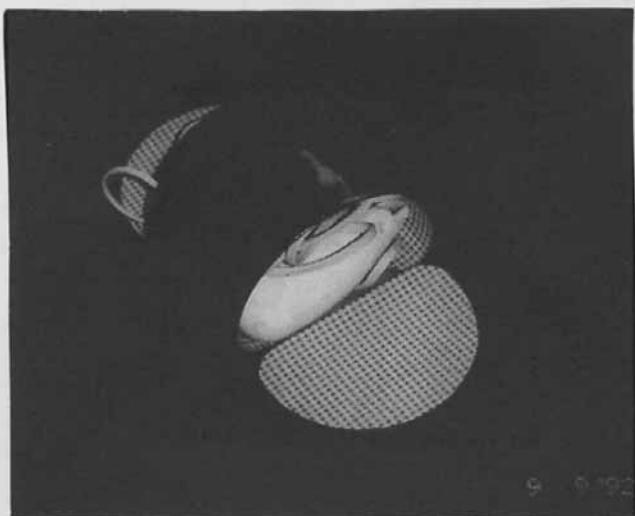

Smoothy



Gymnastic Course on LP





